


Complete Comfort II

→ ANTI-FATIGUE • INDOOR & OUTDOOR



→ WHY CHOOSE THIS MAT?

Complete Comfort II mats are anti-microbial, anti-fatigue mats that can be autoclave sterilized and commercially laundered.

- **Comfortable** – 13 mm thick nitrile rubber foam provides superior anti-fatigue properties
- **Clean** – Anti-microbial treatment provides lifetime protection from odors and degradation
- **Safe** – Beveled edges provide a safe transition from the floor to the mat and allows carts to easily roll over the surface. Textured surface offers superior slip and skid resistance
- **Versatile** – Grease and oil proof; chemical, water and animal fats resistant; welding safe
- **Easy to clean** – Lightweight flexible design ensures easy handling and cleaning – 100% commercially launderable

→ SPECIFICATIONS




Material	100% High density, closed-cell Nitrile rubber with 12% recycled regrind in the rubber for maximum resistance to water, oils, greases, chemicals, and animal fats
Other properties	<ul style="list-style-type: none">• Thickness: 13 mm• Weight: 6,1 kg/m²
Safety	<ul style="list-style-type: none">• Flammability: Passes Flammability Standard DOC-FF-1-70• Lifetime Anti-microbial treatment: Ultrafresh DM-25, reduces odors by inhibiting the growth of germs and bacteria• Welding Safe• Static Control: ASTM C1028-96 Static Coefficient of Friction: Dry: 0.96 Wet: 0.82• Compression Deflection: 50.5% at 20 psi, 63.1% at 40 psi
Colour	Black
Recommended use	Recommended for use in wet or dry commercial and industrial settings, the Complete Comfort II is particularly popular in healthcare facilities since it is anti-microbial treated and can be autoclave sterilized.

→ STANDARD SIZES

60 x 90* 90 x 115 90 x 150* 115 x 180

* In stock

Size Tolerance: +/- 5%

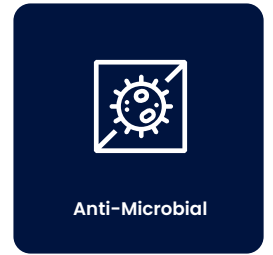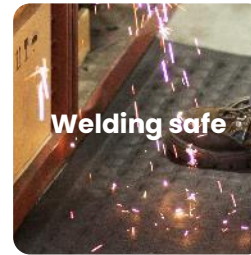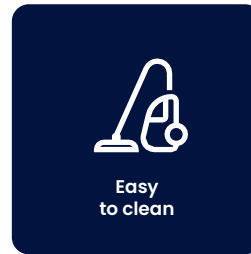

→ CLEANING INSTRUCTIONS

Complete Comfort II mats can be cleaned in several different ways:

1. Commercially laundered (see Laundering Instructions).
2. Sterilized in an autoclave.
3. Washed in a commercial dishwasher (please check your local health code for restrictions).
4. Washed by hand using the following instructions: Scrub with a deck brush (as needed), using a detergent with a neutral pH; rinse with a hose or pressure washer

Hang to dry. Always make sure the mat is dry before placing it back in service.

→ LAUNDERING INSTRUCTIONS

The formula below does not require extensive mechanical action or drying. The formula is designed to dissolve grease residue by using hot water to emulsify oils and grease.

1. Flush 2-3 minutes, high water level, cold water
2. Break 5-10 minutes, high water level, 140° F (60° C)
3. Rinse 2 minutes, high water level, cold water
4. Rinse 2 minutes, high water level, cold water
5. Drain 2 minutes

Complete Comfort mats do not require extracting or drying. Lay mats flat following removal from the washer. Allow cooling before rolling.